

Tech Company

Zen4 System Hardware Guide

Tech Company Systems, Inc. Legal Notice

Copyright © 2005, 2006 Tech Company Systems, Inc. All rights reserved.

Tech Company Systems, Inc.

11 Lane, Suite 222

Huntsville, AL 11222

Phone: 555-12-1212

www.TechCompany.com

Disclaimer

The information contained in this publication is subject to change without notice. Tech Company Systems, Inc. makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Tech Company Systems, Inc. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

Trademarks

The Tech Company logo, Tech Company, Z-Series, Z-Visor, and all other Tech Company Systems, Inc. product names and service marks are trademarks of Tech Company Systems, Inc.

AMD Opteron is a registered trademark of Advanced Micro Devices. Linux is a registered trademark of Linus Torvalds. RED HAT is a registered trademark of Red Hat, Inc. SUSE is a trademark of Novell. VMware® is a registered trademark of VMware, Inc. Microsoft and Windows are registered trademarks of Microsoft Corporation. IBM and Tivoli are registered trademarks of IBM Corporation.

Other product names mentioned herein may be trademarks or registered trademarks of their respective companies.

Printed in USA.

Contents

Chapter 1 Introduction to the Tech Company Servers	5
---	----------

System and Architectural Overview	6
Abstract	6
System and Architectural Overview	6
Technical Overview	8
Abstract	8
Technical Overview	8
Processors, Memory, and Partitioning	10
Abstract	10
Processors, Memory, and Partitioning	10
System Management	12
Abstract	12
System Management	12
Storage I/O	13
Abstract	13
Storage I/O	13
Internal Hard Drive	14
Abstract	14
Internal Hard Drive	14
System Battery/System Time	15
Abstract	15
System Battery/System Time	15
Operation	16
Abstract	16
Operation	16

Hot-Plug and Controlled Hot Removal Capability	16
High Availability	16
Software Components	17
Abstract	17
Software Components	17
Typical System Installation	18
Abstract	18
Typical System Installation	18
Appendix B Product Support	19
Warranty	20
Abstract	20
Warranty	20
Verify Warranty Status	21
Abstract	21
Verify Warranty Status	21
How to Verify Warranty Status	21
Service Features and Levels	22
Abstract	22
Service Features and Levels	22
Contacting Customer Support	23
Abstract	23
Contacting Customer Support	23
Return Materials Authorization (RMA) Procedure	24
Abstract	24

Return Materials Authorization (RMA) Procedure	24
Return a Product or Component	25
Abstract	25
Return a Product or Component	25
Labeling Requirements for Return Packages	25
Steps to Return a Product or Component	25
Result	26
Ordering Replacement Parts or Spares	27
Abstract	27
Ordering Replacement Parts or Spares	27
Glossary	28
Index	29

Chapter 1 Introduction to the Tech Company Servers

This chapter introduces the Tech Company enterprise servers.

System and Architectural Overview

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

System and Architectural Overview

The Tech Company Zen4 enterprise server combines partitionable symmetric multiprocessing (SMP) using 64-bit AMD Opteron® processors with multi-Gigabit Ethernet networking, Fibre Channel storage I/O, and offloaded application services. The network and storage I/O can be dynamically allocated across a built-in 80-Gbps switch fabric. Multiple Zen4 system chassis can be directly coupled and managed as a single pool of resources. The result is a mainframe-class architecture that offers high throughput and stability for enterprise applications.

The Zen4 system consists of a chassis with the following installed resources ():

- **Processor and Memory Modules (PMMs)** that support general-purpose computing requirements. Two types of PMMs are available: PMM-0410s and PMM-0200s.
PMM-0410s provide processor sockets for up to four AMD Opteron 64-bit x86 CPUs with memory. The PMM-0410 also offers a total of 8 Gbps of storage I/O bandwidth using Fibre Channel interfaces.
PMM-0200s provide CPU sockets for a maximum of two AMD Opteron 64-bit x86 CPUs with memory. Applications can be installed on a PMM-0200 to provide low-latency access by the PMM-0410. Such a configuration can improve performance for certain applications on the PMM-0410 that depend on other applications that can be accessed with low latency.
- **Q-Series System Modules (ZSMs)** that implement provisioning, system management, and fabric management capabilities.
- **Ethernet Network Modules (ENMs)**, each providing 10 Gbps of network I/O bandwidth, using either copper or fiber optic interfaces.
- **Fibre Channel Modules (FCMs)** that interface to storage arrays and storage devices, either directly or indirectly through storage area networks (SANs).
- **Application Service Modules (ASMs)** that provide acceleration facilities for specialized functions such as load balancing, SSL

encryption, and XML processing. The initial ASM implementation is the ASM-0201, which hosts SSL acceleration and server load balancing (SLB) services either in standalone or “cluster” mode.

Major Zen4 components are designed for front-accessible servicing. Power modules are located on the back of the chassis (). Fan trays above and below the resource modules provide system cooling.

Figure 1-1. Zen4 Chassis—Front View

Figure 1-2. Zen4 Chassis—Rear View

Technical Overview

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Technical Overview

The Zen4 system is a collection of resources arranged around a coherency fabric and a network or I/O fabric. Three broad types of resources are attached to the fabrics and linked through an internal switch: processing and memory, I/O modules (Ethernet and Fibre Channel), and off-load or acceleration services. The ZSM monitors and manages these resources. The processors and associated memory are organized as standard SMP servers, allowing flexible combining and partitioning to meet application needs. The Ethernet and Fibre Channel interfaces provide connections to the external network and to storage resources. The Zen4 system includes built-in layer 2 network switching capabilities.

There are multiple operating environments within a Zen4 system, including user operating environments for customer application deployment and internal operating environments for the Zen4 system software. The user operating system (for example, SUSE™ Linux Enterprise Server 9) runs in a partition to create a server that runs user applications.

Reliability, availability, and serviceability (RAS) are three qualities that represent the collective quality-of-service attributes of network systems. The Zen4 system has a combination of features, hardware design, and software design that maximizes uptime and minimizes downtime. Hardware design features that contribute to high levels of RAS include front access to most components for servicing, redundant cooling and power systems, and redundancy of system control modules and network interfaces. A graphical user interface and command line user interface are available for management of the system resources; in addition, an SNMP agent allows the Zen4 chassis to be integrated into enterprise monitoring systems such as HP OpenView® or IBM Tivoli® for diagnostics, monitoring, and troubleshooting. The partition boot architecture of the Zen4 system helps minimize downtime arising from disruptive operating system updates.

Server administration and network administration are combined in the Zen4 system; the flexible security model provided by the Zen4 platform allows these functions to be separated in settings where this is preferred. The Zen4 platform provides fine-grained security and role-based access control that defines specific access privileges for different user roles. In addition to the default user roles, you can define other specific roles and access privileges. Within each user role, you can also specify query-only access

and query-plus-set access for individual management and administration operations.

Processors, Memory, and Partitioning

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Processors, Memory, and Partitioning

Application processors are deployed on modules called Processor and Memory Modules (PMMs). PMMs support general-purpose computing requirements and are available in two series: PMM-0410s and PMM-0200s.

- PMM-0410s provide processor sockets for up to four AMD Opteron 64-bit x86 CPUs with memory. The PMM-0410 also offers a total of 8 Gbps of storage I/O bandwidth using Fibre Channel interfaces.
- PMM-0200s provide CPU sockets for a maximum of two AMD Opteron 64-bit x86 CPUs with memory. Applications can be installed on a PMM-0200 to provide low-latency access by the PMM-0410. Such a configuration can improve performance for certain applications on the PMM-0410 that depend on other applications that can be accessed with low latency.

The application processors and memory are the only resources that attach to the coherency fabric. The processors and memory on a PMM can be organized into standard SMP servers; in a chassis equipped with PMM-0410s, multiple PMM-0410s can be linked through the coherency fabric (backplane) to create instances of SMP servers containing up to eight processor sockets. Smaller partitions of two or four processors can also be configured.

A chassis equipped with two PMM-0410s can support eight system processors (8 cores with single-core processors or 16 cores with dual-core processors), 128 GB of system memory, 30 Gbps allocated between network traffic and storage traffic, and three Application Service Modules (ASMs).

The PMM-0410s and coherency fabric support physical partitioning of the processors and memory. Because each partition is an independent server, multiple independent instances of operating systems can be hosted concurrently. A partition can be created, initialized, started, stopped, reset, or destroyed without affecting the operation of other partitions. Each partition appears as a separate entity for system management.

Physical partitioning is implemented in the hardware and in system software. The hardware ensures that hardware and software faults in one hardware partition cannot propagate to another partition.

System Management

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

System Management

System management is implemented through a combination of management software components and a distributed hardware management subsystem. Through the hardware management subsystem, system components communicate with the ZSM, which manages chassis resources. The hardware management subsystem also allows remote, “lights-out” operation of the Zen4 system. This management capability extends to a system in the standby power state, when it has limited operational capabilities as it waits for instructions. All system messages are directed to the ZSM console and system log (syslog) facility.

Access to the Zen4 system for management and software installation is through network or serial connections, eliminating the need for keyboard, video, and monitor connectors on the system itself. In addition, because all necessary software installation can be accomplished through a network connection, the Zen4 system is designed without a CD-ROM drive.

The Zen4 chassis has an LCD front panel display with associated selection buttons. Using the front panel display, you can view system status information and restart the chassis. The CLI, accessible through a direct console port connection or a network connection, provides complete management functions for the system. The Tech Company Z-Visor™ software provides the same management capabilities as the CLI, through a user-friendly graphical interface. Z-Visor also provides visual alarms and alerts.

Storage I/O

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Storage I/O

The Zen4 system has slots for two installed Fibre Channel Modules (FCMs). One FCM provides access to an aggregate of 16-Gbps Fibre Channel I/O bandwidth through 2-Gbps Fibre Channel interfaces. A system with two installed FCMs, therefore, provides a total of 32 Gbps of Fibre Channel I/O.

In addition, each PMM-0400 has dedicated Fibre Channel ports that are associated only with the server partitions on that PMM.

Internal Hard Drive

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Internal Hard Drive

The Zen4 system is designed to provide “diskless operation” and therefore does not include an internal hard drive for the user operating system (UOS). The Zen4 provisioning facility allows users to create flexible server configurations that can be revised and reconfigured quickly based on a number of considerations. This flexibility is lost if the operating system resides on an internal hard drive. An optional direct-attached external hard drive subsystem is available for supporting traditional boot configurations.

Long-term storage for the management application is provided by an on-board flash disk and a 2.5-inch hard disk on the ZSM. The flash disk is used for Zen4 operating system boot, configuration data, and application software. The 2.5-inch hard disk is used for logging.

System Battery/System Time

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

System Battery/System Time

Over time, batteries can leak and damage other system components. To increase system reliability, the ZSM uses a capacitor, rather than a battery, to maintain the system time when the chassis is not plugged into a power source. The system time can be maintained for approximately 48 hours while the chassis is unplugged.

Operation

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Operation

This section outlines the operational features of the Zen4 system.

Hot-Plug and Controlled Hot Removal Capability

All of the modules used in the Zen4 system have circuitry to allow removal and insertion of a module without interrupting system power. This is accomplished by controlling the inrush current and power sequencing on the boards.

High Availability

The Zen4 system is designed with redundant subsystems to ensure high availability of resources. Four power modules can be connected to two independent power feeds. These power modules share the power load during normal operation. If one power feed fails, the remaining two power modules can provide sufficient power for the system. System operation requires at least two power modules. Two fan trays, each with six fans, provide cooling for the chassis. If one tray (or part of a tray) fails, the ZSM increases the speed of the remaining fans to maintain cooling until the faulty fan tray can be replaced. Multiple interfaces are available on the PMM-0410s and ENMs to provide redundancy for storage and network access.

Software Components

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Software Components

Software components of the Zen4 system include the system software image, user operating system, and management software that includes a command line interface (CLI) and the Z-Visor software graphical user interface (GUI).

The system software image resides on the ZSM; it manages the chassis hardware resources, including the server partitions. User operating systems are associated with partitions and execute on the processors on the PMM. The command line interface is accessible through a console connection or from a client workstation. Z-Visor software is accessed from a management workstation and manages the Zen4 system through an Ethernet connection to the ZSM.

Typical System Installation

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Typical System Installation

Figure 1-3 shows a typical installation of the Zen4 system with four server partitions. Each partition has two Fibre Channel I/O connections to a storage area network (SAN) and two Ethernet connections to the external network. The ZSM has an Ethernet connection and a serial connection to a management network.

Appendix B Product Support

This appendix provides information about product warranties, customer service, returning components, and ordering replacement or spare components.

Note: For additional product support information that is not covered in this appendix, visit the Tech Company Customer Support web site or call one of the customer service phone numbers listed in B-1 on B-2.

Warranty

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Warranty

Zen4 systems are covered by a comprehensive warranty. For detailed information about the standard warranty, contact the Tech Company Sales or Customer Support Team.

Verify Warranty Status

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Verify Warranty Status

How to Verify Warranty Status

To verify warranty status, contact Tech Company Customer Support or your Tech Company account representative.

You will need the chassis serial number from the label on the back of the Zen4 chassis.

Service Features and Levels

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Service Features and Levels

The goal of the Tech Company Customer Support organization is to consistently deliver the quality of service you require in a mission-critical, data center environment. Tech Company is committed to providing around-the-clock customer service, either directly or through our service partners who have been factory-trained and certified by Tech Company Systems. You can log calls at any time by telephone or email, or through a web interface to our support system. All calls are actively managed to conclusion by a Tech Company Support Engineer. (A service partner may provide the on-site repair services.) Status tracking is available via the web interface to our support system.

Tech Company provides multiple scalable service levels to suit individual customer needs. Some of the service levels include access to an assigned Tech Company Customer Support account engineer. This engineer can help you with installation and upgrade planning and provide progress reviews. An assigned account engineer is the primary point of contact for handling service calls.

Customers with the appropriate service contract may designate one of the following priority levels for service calls:

- Priority 1, highest severity; work starts immediately to resolve the problem.
- Priority 2, medium severity; work starts within 1 hour to resolve the problem.
- Priority 3, lowest severity; work starts within 4 hours to resolve the problem.

Contacting Customer Support

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Contacting Customer Support

For additional information about customer service, visit the Tech Company web site at:
To contact Customer Support, use the phone numbers or email address in .

Table 1-1. Contacting Tech Company Customer Support

USA		
24-hour hotline	1-800-968-6501	Email: support@Tech Company.com

Return Materials Authorization (RMA) Procedure

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Return Materials Authorization (RMA) Procedure

Tech Company systems are covered by a 1-year comprehensive on-site warranty covering parts and labor. Following the warranty period, systems will normally be maintained by Tech Company under the terms of a service agreement covering parts and labor. For customers who wish to maintain their own systems and obtain replacement parts from Tech Company, we offer a parts replacement service which includes this RMA procedure.

Tech Company will, at its option, repair or replace any product or component that fails during the term of the parts replacement service agreement at no cost to you, provided that you contact the Tech Company Support Center to report the failure and that you comply with the Tech Company return policies.

A replacement product or component will be shipped to you on the first contracted day following confirmation of the failure. When you receive the replacement, you must return the failed product or component to Tech Company under the RMA number issued by Tech Company. Tech Company may invoice for any failed products or components under the following two conditions:

- You have caused further damage to the product or component.
- The product or component is not returned within 10 days of receipt of the replacement.

Return a Product or Component

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Return a Product or Component

Labeling Requirements for Return Packages

Products returned to Tech Company must be pre-authorized by Tech Company with an RMA number marked on the outside of the package, and sent prepaid, insured, and packaged appropriately for safe shipment using the packaging that the replacement was sent in. Only packages with RMA numbers written on the outside of the shipping carton and/or the packing slips and shipping paperwork will be accepted by the Tech Company receiving department. All other packages will be rejected.

Steps to Return a Product or Component

To return a component:

1. **Contact the Tech Company Customer Support Center Hotline to request a replacement component.**
 - Be prepared to provide the following information:
 - Chassis serial number
 - Serial number of item to be returned
 - Model number of item to be returned
 - Description of problem
 - Return address and phone number

Tech Company will issue an RMA number and ship a replacement component.
2. **After the replacement item has been unpacked and installed, use the same packaging materials to pack the defective item for return to Tech Company.**
3. **Make sure that the RMA number is clearly marked on the packaging exterior.**
4. **Ship the product back to Tech Company using the carrier designated by Tech Company.**

Result

Title to any returned products or components will transfer to Tech Company upon receipt. Tech Company will be responsible for all freight charges for returned products or components as long as you use the carrier designated by Tech Company.

Ordering Replacement Parts or Spares

Abstract

[Abstract element: Author will need to write introductory content that would be unfit for a short description element.]

Ordering Replacement Parts or Spares

To order replacement parts or spares, visit the Tech Company Customer Support web site or contact your Tech Company account representative.

Glossary

M

My Term

My definition

Index

(

(ASMs 6

A

application processors 10

Application Service Modules 6

application software 14

Architectural Overview 6

B

batteries 15

C

capacitor 15

chassis 6, 12, 15, 17, 21, 25

circuitry 16

clI commands 12

Command Line interface (CLI) 17

configuration data 14

Controlled Hot Removal 16

customer service 19, 22-23

customer support 19-24, 27

D

diskless operation 14

display, front panel 12

E

ENMs 6, 16

enterprise servers 5

Ethernet connection 18

Ethernet Network Modules 6

Ethernet networking 6

F

fabric 10

fan tray

- redundant 16

FCMs 6

Fibre Channel I/O 18

Fibre Channel I/O bandwidth 13

Fibre Channel Modules 6, 13

fibre channel ports 13

Fibre Channel storage I/O 6

flexible security 8

front panel display 12

G

graphic user interface (GUI) 17

H

hard disk 14

hardware management subsystem 12

High Availability 16

Hot-Plug 16

I

independent power feeds 16

inrush current 16

Internal Hard Drive 14

internal hard drive 14

Introduction 5

M

mainframe-class architecture 6

model number 25

N

network 6

O

offloaded application services 6

on-board flash disk 14

Operation 16

operational features 16

P

partitionable symmetric 6

partition 10

partitioning 10-11

physical partitioning 10

PMM 10, 13

PMM partition 10

PMM-0200 10

PMMs 6

power

- redundant 16

power module 7

power modules 16

power sequencing 16

Processor and Memory Module 6, 10

processors

- application 10

product support 19

Q

Q-Series System Modules 6

R

RAS 8

redundant subsystems 16

replacements, ordering 19, 24, 27

return Materials Authorization. See RMA procedure 24

Return Materials Authorization. See RMA procedure 25

RMA number 24-25

RMA procedure 24

S

SANs 6

serial number 25

server partitions 18

servers 10

service levels 22

SMP 6, 10

SNMP 8

Software components 17

storage 14

storage area network 18

storage area networks 6

storage I/O 6, 10

subsystems, redundant 16

system reliability 15

system time 15

T

Tech Company Servers 5

Tech Company web site 23

Typical system Installation 18

U

UOS 14

user operating system 14

V

Vista management software 12

W

warranty 20-21, 24

Z

Zen4 8, 18

Zen4 chassis 21

Zen4 system 20

ZSM 14-16

ZSM (Z-Series System Module) 12

ZSMs 6

Z-Visor management software 12